

Brief Introduction

UC46 is expansion module for Color IP Phones. It expands the functional capability of your VoIP phone to a whole new level. Press   to change the pages. Two page views allow 40 programmable keys that work as BLF, Speed dial, call park, pick up etc.

Basic Configurations

How to connect to the IP Phone - Change the IP Phone to “Connect to Expansion Module”

Log on the web page of Phone, on the page “Network →Basic”, PC Port option, choose “Connect to Expansion Module”. After save set the Phone will reboot.

Line

- 1) Click on Function Keys->Ext Key.
- 2) In the desired key field, select Line from the pull-down list of Type.
- 3) Select the Account from the pull-down list of Account.
- 4) Click "save set" to save the configuration.

BLF

- 1) Click on Function Keys->Ext Key.
- 2) In the desired key field, select BLF from the pull-down list of Type.
- 3) Enter the phone number or extension you want to monitor in the Value field.
- 4) Enter the desired value in the Label field.
- 5) Select the Account from the pull-down list of Account.
- 6) Enter the call pickup code in the Pickup code field.
- 7) Click "save set" to save the configuration, and restart.

Speed Dial

- 1) Click on Function Keys->Ext Key.
- 2) In the desired key field, select Speed Dial from the pull-down list of Type.
- 3) Enter the desired number you want to dial out directly in the Value field.
- 4) Enter the desired value in the Label field.
- 5) Select the Account from the pull-down list of Account.
- 6) Click "save set" to save the configuration.

Intercom

- 1) Click on Function Keys->Ext Key.
- 2) In the desired key field, select Intercom from the pull-down list of Type.

- 3) Filled the Value field.
- 4) Enter the desired value in the Label field.
- 5) Select the Account from the pull-down list of Account.
- 6) Click "save set" to save the configuration.

Call Park

 
- 1) Click on Function Keys->Ext Key.
- 2) In the desired key field, select Callpark from the pull-down list of Type.
- 3) Enter the call park feature code in the Value field.
- 4) Enter the desired value in the Label field.
- 5) Select the Account from the pull-down list of Account.
- 6) Click "save set" to save the configuration.

Direct Pickup


- 1) Click on Function Keys->Ext Key.
- 2) In the desired key field, select Direct Pickup from the pull-down list of Type.
- 3) Enter the direct call pickup code followed by the specific number you want to pick up calls from in the Value field.
- 4) Enter the desired value in the Label field.
- 5) Select the Account from the pull-down list of Account.
- 6) Click "save set" to save the configuration.

For More information, Please refer to user manual or send email to support@htek.com


Connecting




Expansion Module

 

Stand

 

Connecting Sheet

 

Power Adapter







Ethernet Cable




Screw

Expansion Module

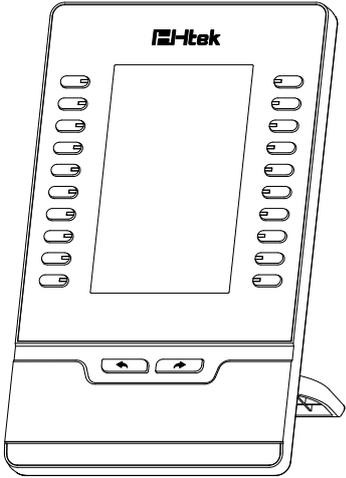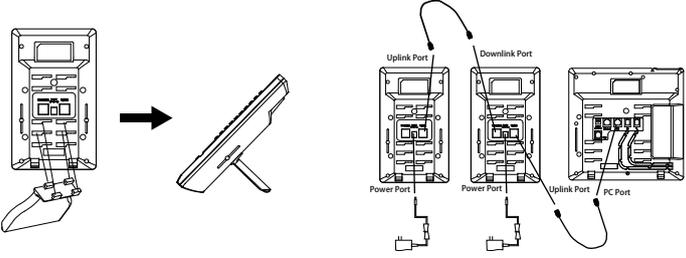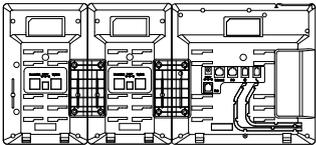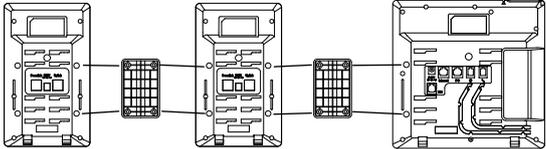

 When UC46 is connected with the UC800 series color IP Phone, the connecting sheet should be changed and another rubber pad should be added to the stand.



Connecting Sheet

Add another rubber pad

Quick Reference For UC46